INSTRUCTION
MANUAL

SUMMIT

COMPACT REFRIGERATOR
MODEL CT-70J

ATTENTION

For your protection in the event of theft or loss of refrigerator, fill in the spaces provided below.
Model and Serial Numbers are indicated on rear wall of refrigerator.

MODEL No._____

SERIAL No._____

If you know all about it,
you'll enjoy it more

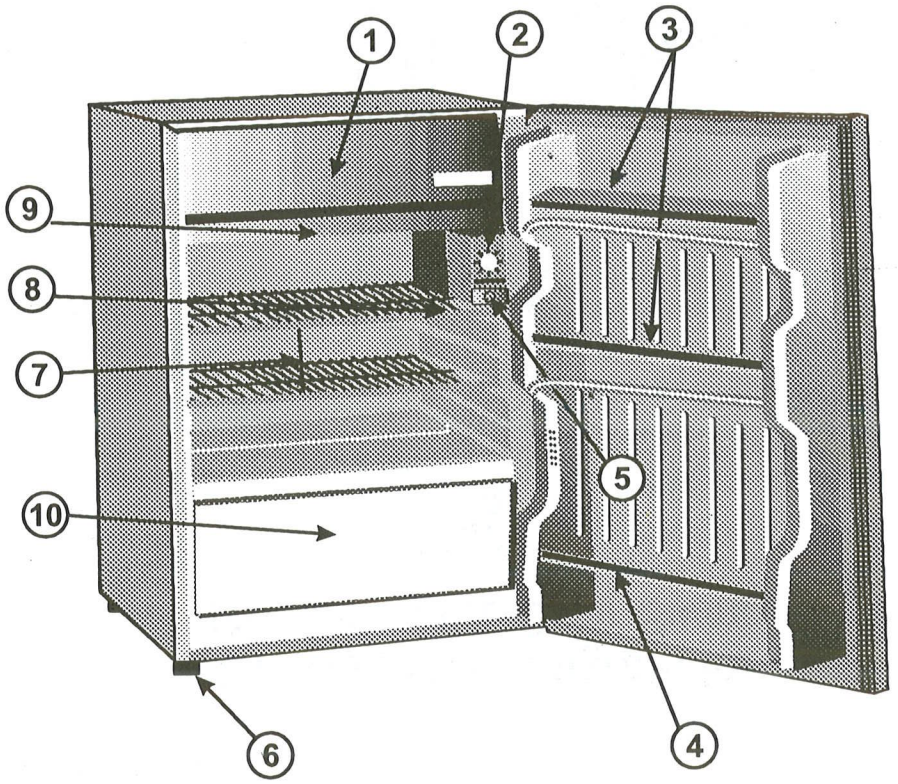

1. **Freezing compartment:** Use for making ice cubes.
2. **Cold control knob:** Turn this to adjust refrigerator temperature.
3. **Small item rack.**
4. **Bottle rack.**
5. **Interior lamp switch.**
6. **Adjustable foot:** Keeps refrigerator level.
7. **Slide-out shelf:** Odor resistant, rustproof, plastic coated steel shelf.
8. **Interior lamp:** Lights up when door is opened.
9. **Drip tray:** Catches water from defrosting.
10. **Crisper with glass lid:** Keeps vegetables fresh.
11. **Ice cube tray. (NOT SHOWN).**

CAUTION

Do not operate refrigerator near inflammables, such as gasoline. Do not use for storage of inflammables.

Your refrigerator must be grounded. Use 120 Volts, 60 Hz outlet. Do not use extension cord.

Use 3-prong grounded wall outlet. (Only this method complies with National Electrical Code, local codes and ordinances.)

UNLESS THE GROUNDING METHOD IS FOLLOWED, YOU ARE NOT PROTECTED AGAINST SEVERE OR LETHAL SHOCK IN THE EVENT OF A SHORT CIRCUIT OF AN ELECTRICAL COMPONENT OR WIRING OF REFRIGERATOR.

Where to install refrigerator

To use refrigerator with the best efficiency and safety, select suitable place to install refrigerator according to the following:

1. This refrigerator is designed for free standing installation only, and should not be recessed or built in.
2. Refrigerator should be installed on strong, level floor or counter. If the floor is not quite level, adjust refrigerator foot.
3. Allow 4 inches of space between refrigerator back and wall behind.
4. Avoid any direct sunlight, heat and moisture.
5. Refrigerator is equipped with a three-prong plug and is grounded to eliminate electrical hazards. In order to make it effective, refrigerator must be plugged into a grounded electrical outlet.
6. Do not use extension cord.

Test Run

Before using refrigerator, clean it and make test run to see if the following are completed. If not, check electricity supply. When cause of trouble cannot be located, contact your Summit dealer.

1. Set cold control knob at "OFF" position and then plug AC cord into an electrical outlet of 115 volts, 60 Hz. Motor should not run.
2. Set cold control knob at "MAX" position and let refrigerator operate for 20 minutes. Freezing compartment should get slightly frosted and motor should run smoothly with a soft hum.
   Then rotate cold control knob counterclockwise toward "MIN" position. Before pointer of the knob reaches "MIN" position, motor should turn off.

How to defrost

For the most efficient operation of refrigerator with the minimum electrical energy consumption, defrost freezing compartment whenever the layer of ice/frost on the wall of freezing compartment reaches a quarter inch thick.

For defrosting, remove frozen foods and/or ice cube trays from freezing compartment and put drip tray in place. To start defrosting, simply set cold control knob at "OFF" position. (See illustration below.)

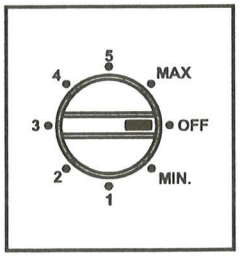

Temperature control

The refrigerator compartment temperature can be adjusted colder or warmer by turning the Temperature Control Knob. Colder temperature can be achieved by turning the Control Knob clockwise towards the "MAX" position. Warmer temperature can be selected by turning the Control Knob counterclockwise towards the "MIN" position.

Refrigerator temperature will vary depending on the quantity of the foods stored and on the frequency with which the door is opened. Set cold control knob at "MAX" position only when ice cubes are needed in a hurry.

Usually cold control knob should be set at middle position.

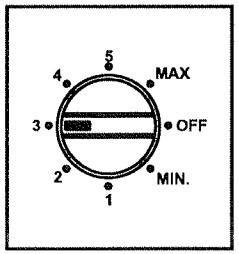

How to remove ice cubes from tray

Ice cube tray is flexible. Twist tray to remove ice cubes.
Do not use boiling water or metal instrument such as a knife or screwdriver to remove ice cube tray, because this may damage plastic parts or evaporator.

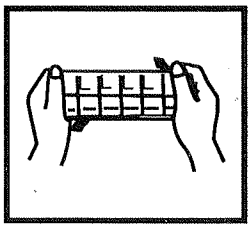

Defrosting usually takes a few hours. In order to defrost faster, remove all foods from refrigerator and keep door open. Also pouring warm (not hot) water onto frosted part may reduce time consumed for defrosting.

Never use any sharp or metallic instruments to remove ice/frost from freezing compartment. A punctured evaporator will cause serious problems and void the warranty. Also do not use boiling water or defrost heater because it may damage plastic parts such as cabinet liner and it will void the warranty, too.

When defrosting is completed, remove drip tray and dispose of water therein. Then set cold control knob at any desired position between "MAX" and "MIN" to restart refrigeration.

If suspension of defrosting is required before completion, return cold control knob to operating position.

Disassembly Diagram for Reversing the Door Swing

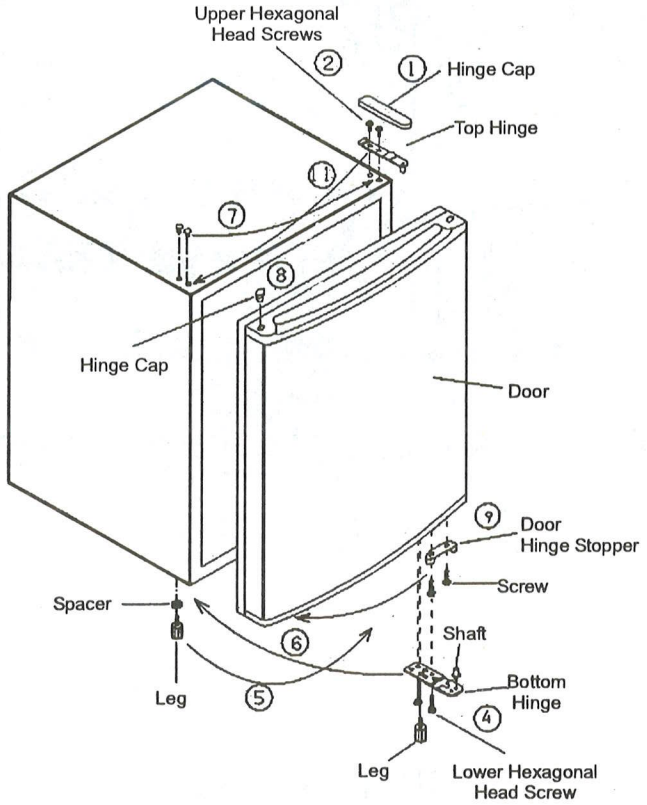

Reversing the door swing

Refer to the disassembly diagram and change the door hinges in the following procedure. The numbers in the diagram indicate the procedure order in the instructions.

1. Remove the hinge cap by twisting it off.
2. Remove the upper hexagonal head screws. The refrigerator door can now be removed.
3. Tilt the refrigerator back or lay it on its back for steps 4, 5 and 6. Use a pad or blanket to protect the floor and to avoid scratching the painted finish.
4. Remove the leveling legs by turning them counterclockwise. Remove the lower hexagonal head screws, two on the hinge side and one near the front corner of the other side.
5. Attach the left side leg and the leg spacer to the other side hole which was positioned symmetrically.
6. Attach the bottom hinge symmetrically to the other side of the cabinet.
7. Remove the upper hinge plastic pins and insert them in the holes from which the screws were removed in procedure 2.
8. Take off the hinge collar cap using a screwdriver and insert them in the hinge collar on the opposite side.
9. Remove the refrigerator door hinge stopper and the hinge stopper screws and install them in the other side of the door.
10. Attach the refrigerator door to the bottom hinge.
11. Attach the upper hinge to the refrigerator door. Do not tighten the screws completely.
12. The direction in which the door opens has now been changed; however, the following points should be checked:
    a. Make sure the door is on straight.
    b. Make sure that there is no space between the door gasket and the refrigerator unit itself when the door is closed.
    c. Make sure that the gasket on the hinge side is not caught between the door and the unit when the door is opened or closed. (If the door is forced closed when the gasket is caught, the gasket may be damaged).

    When checking the above points, if it is discovered that the door is not installed properly (this is apt to happen at the first try), loosen the screws holding the upper hinge, straighten the door and tighten the screws slowly with the socket wrench. After making sure that the door is installed correctly, tighten all the screws holding the hinge. If they are not tightened, the door may slip out of position or there may be an opening between the door and the unit.
13. Stand the unit back in the upright position.

Cleaning and maintenance

Turn off refrigerator and remove foods, shelves, trays, etc. Wash interior liner with a solution of warm water and two tablespoons baking soda per quart water. Then rinse and wipe. Do not use soaps, detergents, scouring powder, spray cleaners or the like for liner-it may cause odors in refrigerator compartment.

Wash ice cube trays, drip tray and shelves in a mild detergent solution and dry with a soft cloth.

Wipe exterior surface with soft cloth dampened with soapy water and then dry with soft cloth. Usual spray appliance cleaners may be used for exterior only.

Use only mild soapy water to clean door gasket.

Never use acids, chemical thinner, gasoline, benzine or the like for cleaning any part of refrigerator. Boiling water and benzine may deform or damage plastic parts.

Your Summit refrigerator does not require any maintenance.

SUMMIT

SUMMIT APPLIANCE DIV.

Felix Storch Inc.
1435 Watson Avenue, P.O. Box 1357
Bronx, New York 10472

8336460162500

Printed in Mexico